



Network Mini PT Camera

Ouick Start Guide

Quick Start Guide

COPYRIGHT @2017 Hangzhou Hikvision Digital Technology Co., Ltd. ALL RIGHTS RESERVED.

Any and all information, including, among others, wordings, pictures, graphs are the properties of Hangzhou Hikvision Digital Technology Co., Ltd. or its subsidiaries (hereinafter referred to be "Hikvision"). This user manual (hereinafter referred to be "the Manual") cannot be reproduced. changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of Hikvision, Unless otherwise stipulated, Hikvision does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

About this Manual

The Manual includes instructions for using and managing the product, Pictures, charts, images and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons. Please find the latest version in the company website (http://overseas.hikvision.com/en/). Visit the company website (http://overseas.hikvision.com/en/) to get the manuals, client software, and developing tools.

Please use this user manual under the guidance of professionals.

PROVIDE TIMELY TECHNICAL SUPPORT IF REQUIRED.

Trademarks Acknowledgement

HIKVISION and other Hikvision's trademarks and logos are the properties of Hikvision in various jurisdictions. Other trademarks and logos mentioned below are the properties of their respective owners.

Legal Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE PRODUCT DESCRIBED, WITH ITS HARDWARE, SOFTWARE AND FIRMWARE, IS PROVIDED "AS IS", WITH ALL FAULTS AND ERRORS. AND HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD PARTY. IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS EMPLOYEES OR AGENTS BE LIABLE TO YOU FOR ANY SPECIAL CONSEQUENTIAL INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS BUSINESS INTERRUPTION OR LOSS OF DATA OR DOCUMENTATION IN CONNECTION WITH THE USE OF THIS PRODUCT. EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES

REGARDING TO THE PRODUCT WITH INTERNET ACCESS. THE USE OF PRODUCT SHALL BE WHOLLY AT YOUR OWN RISKS HIKVISION SHALL NOT TAKE ANY RESPONSIBILITES FOR ABNORMAL OPERATION, PRIVACY LEAKAGE OR OTHER DAMAGES RESULTING FROM CYBER ATTACK, HACKER ATTACK VIRUS INSPECTION OR OTHER INTERNET SECURITY RISKS: HOWEVER HIKVISION WILL

SURVEILLANCE LAWS VARY BY JURISDICTION. PLEASE CHECK ALL RELEVANT LAWS IN YOUR JURISDICTION BEFORE USING THIS PRODUCT IN ORDER TO ENSURE THAT YOUR USE CONFORMS THE APPLICABLE LAW HIKVISION SHALL NOT BE LIABLE IN THE EVENT THAT THIS PRODUCT IS USED. WITH ILLEGITIMATE PURPOSES

IN THE EVENT OF ANY CONFLICTS RETWEEN THIS MANUAL AND THE APPLICABLE LAW. THE LATER

Regulatory Information

ECC Information

Please take attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. ECC compliance This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is
- -Consult the dealer or an experienced radio/TV technician for help.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement

This product and - if applicable - the supplied accessories too are marked with "CE" and ly therefore with the applicable harmonized European standards listed under the FMC Directive 2014/30/EU. the RoHS Directive 2011/65/EU, Radio Equipment Directive

2014/53/EU. 2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see:

www.recvclethis.info.

2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg), For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info

Industry Canada ICES-003 Compliance

This device meets the CAN ICES-3 (B)/NMB-3(B) standards requirements.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to

- the following two conditions: (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radioexempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

This equipment should be installed and operated with a minimum distance 20cm between the radiator and your body.

Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

Safety Instruction

These instructions are intended to ensure that a user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into "Warnings" and "Cautions"

Warnings: Serious injury or death may occur if any of the warnings are neglected. Cautions: Injury or equipment damage may occur if any of the cautions are neglected.

Warnings: Follow these iniury or death.



Cautions: Follow these

injury or material damage.

- Proper configuration of all passwords and other security settings is the responsibility of the installer and/or end-user
- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- Do not connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket. When the product is mounted on wall or ceiling, the device shall be firmly fixed.
- . If smoke, odor, or noise rise from the device, turn off the power at once and unplug the power cable, and contact the service center.




- Make sure the power supply voltage is correct before using the camera.
- Do not drop the camera or subject it to physical shock.

. Do not touch sensor modules with fingers. If cleaning is necessary, use a clean cloth with a bit of ethanol and wipe it gently. If the camera will not be used for an extended period, replace the lens cap to protect the sensor from dirt.

- Do not aim the camera at the sun or extra bright places. Blooming or smearing may occur (which is not a malfunction), and affect the sensor's endurance at the same time.
- The sensor may be burned out by a laser beam, so when any laser equipment is in use, make sure that the surface of sensor will not be exposed to the laser beam.
- Do not place the camera in extremely hot, cold (the operating temperature shall be -10°C to
- +40°C), dusty, or damp locations, and do not expose it to high electromagnetic radiation.
- To avoid heat accumulation, ensure that there is good ventilation to the device.
- Keen the camera away from liquids
- While in delivery, pack the camera in its original, or equivalent, packing, packing materials. Or packing of the same texture.
- Regular part replacement: a few parts (e.g. electrolytic capacitor) of the equipment shall be replaced regularly according to their average endurance. The average time varies because of differences between operating environments and usage history, so regular checking is
- recommended for all users. Please contact your dealer for more details. Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the camera yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)

Appearance

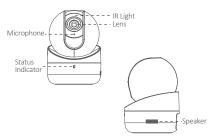

Description

Steady red: The camera is starting up.

- Flashing blue: The camera is started, and is ready for Wi-Fi set-up.
- Steady blue: Wi-Fi configuration is completed and the camera is running properly.
- Flashing red: network communication is abnormal.

Auto light source for night vision. The light is behind the anti-reflection panel. You can see the light when it is on.

RJ-45 Memory Card Sl-WPS/RESET

Description

Micro USB for power supply, 5V ===. Plug the power cable into the power input interface to power on the camera.

You would need to initialize it in the

Silicone Gasket - - - -

Memory For microSD card. If a memory card is used, Card Slot video files will be stored in the memory card.

WPS/RESET WPS: Set Wi-Fi connection via WPS (Wi-Fi Protected Setup) function.

Hik-Connect app.

RESET: Hold down the button for 4 seconds when the camera is running.

Installation

Install memory card (optional

expose the removable cover




2 Open the cover to expose the memory card slot, and insert the memory card



Install the removable cover back

Install the camera.

- Take out the drill template from the package. Paste it to the desired moungting place.
- 2 Drill two screw holes according to the drill template if you use expansion screws.

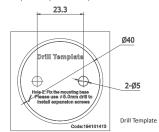


 Take out the adapter from the package, Align the screw holes and fix the adapter.





 4 Fit the adapter into the camera bottom, and rotate the camera base clockwise to get it



Adjust the surveillance angle.


- Rotate the camera body to adjust the panning
- 2 Move the dome drive upwards or downwards to adjust tilting position.



Operations

Power on the Camera

Connect the camera to the power adapter with the Micro USB cable, and then plug the power adapter into the power outlet. When the blue light flashes, the camera is powered on. You can set the Wi-Fi connection

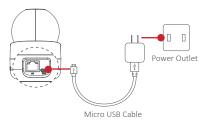

Hik-Connect Setup

- Connect your mobile device to Wi-Fi.
- Download and install the Hik-Connect app by searching the "Hik-Connect" in App Store or Google Play™.







 
- Launch the app and register for a Hik-Connect user account.
- Use of the product is subject to your registration with Hik-Connect and your agreement to the Terms of Service found at



Add the Camera to Your Hik-Connect Account

- Start the adding process only when the indicator flashes
- Connect your mobile phone to a Wi-Fi (5G Wi-Fi is not supported vet).
- Log into the Hik-Connect app.
- In the Home page, tap "+" on the upper-right corner to add a camera.
- Scan the OR code on the bottom of the camera or on the Quick Start Guide cover.
- Tap Connect to a Network button in the popup interface.
- Choose Wired Connection or Wireless Connection on your demand in the popup interface.
- Wireless Connection Input the Wi-Fi password that your mobile phone has connected to, and tap Next to start the Wi-Fi connection process. (Locate the camera within 3 meters from the router when setting up the Wi-Fi.)

- Wired Connection
- Connect the camera to the router with a network cable and tap Connected in the Result interface.
- The router should be the same one that your mobile phone has connected to.



- Tap Add button in the next interface to finish adding.

Hik-Connect

Live View

With Hik-Connect service, you can realize some certain functions of this product (including, but not limited to, live view, and remote playback), which depend on the internet and telecom value-added services.



Launch the Hik-Connect app and you can get the live

view of the connected devices.

Launch the Hik-Connect app and tap Message to see

detection.

Recording

Launch the Hik-Connect app, tap a connected device and tap Gallery button to play back.

- Check the memory card status by tapping on the

- If the memory card status displays as Uninitialized.

event-triggered video in the camera such as motion

Storage Status in the Device Settings interface.

tap to initialize it. The status will then change to

Normal. You can then start recording any

Alarm Notification

the alarm messages.

0504151070420