



# **I319 Instructions**

#### **Technical Specifications**

Input: 5V -2100mA (micro USB) or MW6FU21

Output 1: 7.4VA(max)

2 x 3.7V - 1000Ma ±10%(Li-ion 14500/18500/18650/17670/17500/16650/22650)

Or 2 x 1.4V – 1000mA (NI-MH/NI-CD AA/AAA) CAUTION:

Charge only with above rechargeable batteries

Other types may cause personal injury or damage.

Output 2: USB 5V -2100mA (max)  $\pm 10\%$ 

- 1) When USB is loading 5V / 1000 mA -2100 mA, there will be no charging current for Output 1.
- 2) When USB is loading 5V / 1000mA or below, charging current for output1 will be half.
- When PC USB inputs, input current is 500mA or below and USB output current is 500mA or below.
- 4) When PC USB input, charging current for Output 1 will be 250mA. When USB is loading, there will be no charging current for Output 1.

## **LED Indication**

States	LED Indication
Stand-by	LED off
In-charge	red LED corresponding to a cell slot on
Charging finished	green LED corresponding to a cell slot on
Battery or system	red LED corresponding to a cell slot
failure	flashes

#### **Notes:**

- 1. New rechargeable battery will not operate best until it is used 2-3 times. For rechargeable battery kept more than 1 week, it should be charged again before using because the electricity can lose automatically.
- 2. It is normal to find the battery a little hot during charging process. The battery temperature will gradually be restored to normal room temperature as long as the battery is full.
- 3. For the purpose of best performance of charging, please use Charger I319 in a ventilated indoor circumstance.
- 4. The charging time differs from the different capacity of battery.
- 5. If the charger has not been used for a long time, please take out the battery.
- 6. Working temperature: 0°C-25°C; Storage temperature: -20°C-60°C.

### **Safety Tips:**

- 1. Charger I319 is only applied to nickel-cadmium/nickel hydride rechargeable batteries/ Li-ion batteries.
- 2. Please don't charge other kind of battery (i.e. alkaline battery, carbon zinc rechargeable batteries and other unlisted battery), which will cause the battery leakage or burst, resulting in personal injury.
- 3. Do not use power strip/extended socket or other accessory not approved by security institution in order to avoid fire, electric shock or personal injury.
- 4. Must cut off the mains before the charger is cleaned or after used.
- 5. Do not wet, burn or disassemble the charger and battery; Do not make the battery short-circuit; Do not put any metal or articles into the charger.
- 6. Charger I319 is only used in indoor circumstance so you should not use it in rainy, snowy or other vile weather.

### **Special Note:**

Please read the instructions carefully before use to avoid ill effect of the charger for improper use and maybe result in fire, electric shock or injury in serious situations.

# **Instructions about charging:**

- 1) I319 can charge 1-2 AA/AAA nickel-cadmium/nickel hydride rechargeable batteries or 1-2 Li-ion batteries each time.
- 2) If you want to charge nickel-cadmium/nickel hydride rechargeable batteries or 1-2 Li-ion batteries, please put the batteries into cell slots and note the "+"and "-"marks in the slots.
- 3) After connecting the charger with power supply, LED will flash for a while and then turn off.
- 4) There are two LEDs for each cell slot--red LED and green LED. The red LED lights when the battery is being charged. Green LED lights when charging is finished.
- 5) When charging finished or I319 is not used, please disconnect the charger from the mains socket and take out the battery.

### **Attached Table:**

LED Indications

LED Indications	
Conditions	LED Color
Full	Green
Charge	Red
Bad battery	Red LED flashes